

To disable key repeat, including space bar and cursor keys:

POKE 2594,64

To return keys to normal:

POKE 2594,0

To clear the keyboard buffer:

POKE 208,0

To get the keycode from a pressed key:

PEEK (212)

To wait for a keypress:

POKE 208,0 : WAIT 208,1

To disable the shift/Commodore key combination:

POKE 247,64

To enable the shift/Commodore key combination:

POKE 247,0

To have the List command reset the computer:

POKE 774,61 : POKE 775,255

To disable the Save command:

POKE 818,50

To enable Bit Map mode:

POKE 216, PEEK (216) OR 32

To disable Bit Map mode:

POKE 216, PEEK (216) AND 223

To enable Multicolor Bit Map mode:

POKE 216, PEEK (216) OR 160

To disable Multicolor Bit Map mode:

POKE 216, PEEK (216) AND 95

To set text screen character memory:

POKE 2604, (PEEK (2604) AND 240) OR 1

To return to text screen:

POKE 2604, (PEEK (2604) AND 240) OR 4

To set bit map character memory screen:

POKE 2605, (PEEK (2605) AND 240) OR (0 to 255)

To set video bank:

POKE 56576, (PEEK (56576) AND 252) OR X (X=0 to 6)

To set text screen memory:

POKE 2604, (PEEK (2604) AND 15) OR Y (Y=0 to 255)

To set bit map screen memory:

POKE 2605, (PEEK (2605) AND 15) OR Y (Y=0 to 255)

To change the look of the C-128's 80-column characters on a 1902A monitor screen:

POKE 54784,9 : POKE 54785,232

RUN

Selected C-64 and C-128 POKES and PEEKS

C-64 POKES AND PEEKS

To disable the keyboard within a program:
POKE 649,0

To enable the keyboard within a program:
POKE 649,10

To disable the run-stop key:

POKE 808,239

To enable the run-stop key:

POKE 808,237

To have all keys repeat:

POKE 650,128

To disable the space bar, cursor, insert-delete key repeats:

POKE 650,64

To return all keys to normal operation:

POKE 650,0

To enable listing protection:

POKE 775,1

To disable listing protection:

POKE 775,167

To enable Fast mode on the C-128 from 64 mode:

POKE 53296,255

To return to normal:

POKE 53296,0

To disable the List command:

POKE 774,183 or POKE 775,1

To enable the List command:

POKE 774,26 or POKE 775,167

To enable Multicolor Character mode:

POKE 53270, PEEK (53270) OR 16

To disable Multicolor Character mode:

POKE 53270, PEEK (53270) AND 239

To enable Extended Color mode:

POKE 53265, PEEK (53265) OR 64

To disable Extended Color mode:

POKE 53265, PEEK (53265) AND 191

To enable Bit Map mode:

POKE 53265, PEEK (53265) OR 32

To disable Bit Map mode:

POKE 53265, PEEK (53265) AND 223

To enable Multicolor Bit Map mode:
POKE 53265, PEEK (53265) OR 32 : POKE 53270,
PEEK (53270) OR 16
To disable Multicolor Bit Map mode:
POKE 53265, PEEK (53265) AND 223 : POKE 53270,
PEEK (53270) AND 239

To scroll left or right:
POKE 53270, (PEEK (53270) AND 248) + X
(X = X position of the screen, from 0 to 7)
To scroll up or down:
POKE 53265, (PEEK (53265) AND 248) + Y
(Y = Y position of the screen, from 0 to 7)

To turn on sprites:
POKE 53269, PEEK (53269) OR (2↑SN)
To turn off sprites:
POKE 53269, PEEK (53269) AND (255 - 2↑SN)
(SN = sprite number from 0 to 7)

To blank the screen:
POKE 53265, PEEK (53265) AND 239 or
POKE 53265,11
To return the screen to normal:
POKE 53265, PEEK (53265) OR 16 or
POKE 53265,27

To list without line numbers:
POKE 22,35

To move the cursor to column X, row Y:
POKE 211,X : POKE 214,Y : PRINT

To have the List command reset the computer:
POKE 774,226 : POKE 775,252

To disable the Load command:
POKE 816,157
To enable the Load command:
POKE 816,165

To disable the Save command:
POKE 818,32
To enable the Save command:
POKE 818,237

To input without a question mark:
POKE 19,65
To restore the question mark:
POKE 19,0

To change the cursor speed:
POKE 56325,X (0 = fastest; 255 = slowest)

To clear the keyboard buffer:
POKE 198,0

To change the location of character memory:
POKE 53272, (PEEK (53272) AND 240) OR A
(A = 0, 2, 4, 6, 8, 10, 12 or 14)

To disable the restore key:
POKE 792,193

To enable the restore key:
POKE 792,71

To start bit map:
POKE 53272, (PEEK (53272) AND 240) OR X

To set video bank:
POKE 56576, (PEEK (56576) AND 252) OR X

To set screen memory:
POKE 53272, (PEEK (53272) AND 15) OR Y

C-128 POKES AND PEEKS

To disable the function keys:
POKE 828,183

To enable the function keys:
POKE 828,173

To disable and enable the List command:
either—
POKE 774,139 to disable and
POKE 774,81 to enable
or—
POKE 775,139 to disable and
POKE 775,81 to enable

To disable ROM:
POKE 217,4

To enable ROM:
POKE 217,0

To enable high-resolution graphics:
POKE 53265,59

To disable high-resolution graphics:
POKE 53265,155

To enable multicolor graphics:
POKE 53270,216

To disable multicolor graphics:
POKE 53270,8

To disable the keyboard within a program:
First turn off interrupts, then enter POKE 2592,0
(buffer length 0)

To enable the keyboard within a program:
POKE 2592,10

To disable the run-stop key:
POKE 808,112

To enable the run-stop key:
POKE 808,110

To disable the restore key:
POKE 792,98

To enable the restore key:
POKE 792,64